



Power Steering - Power Steering Control Valve Actuator Vehicles Built Up To: 01/2004

Removal and Installation

PAGE 535


Removal

1. Remove the air deflector.
For additional information, refer to Section [501-02 Front End Body Panels](#).
2. Disconnect the actuator electrical connector.

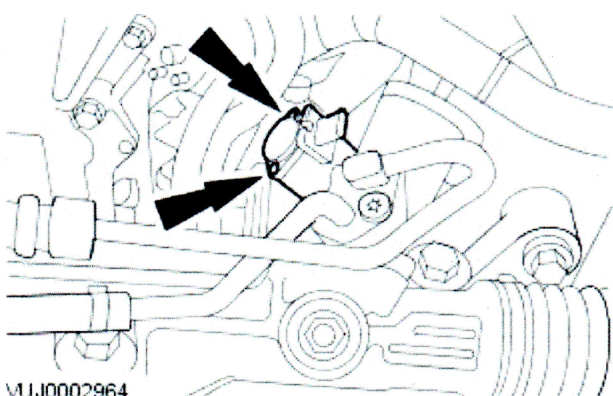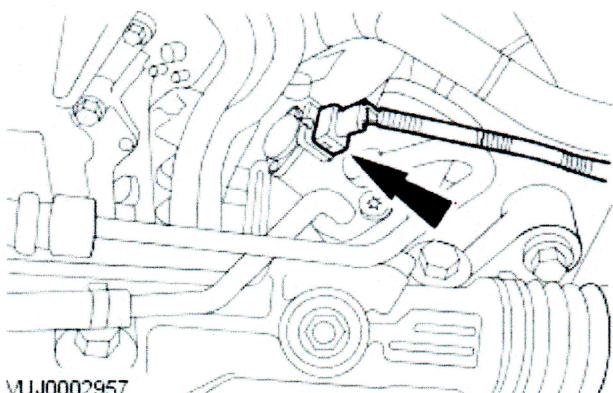

3. Remove the actuator. **TWO BOLTS**
 - Drain the fluid into a suitable container.
 - Remove and discard the O-ring seals and filter.


ZF 7039442 2/6

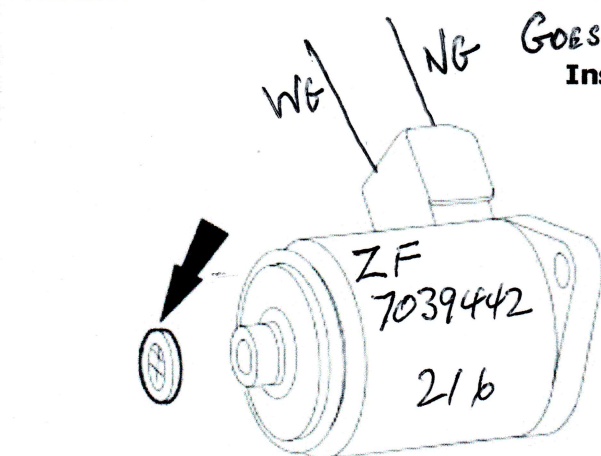


Installation

1. To install, reverse the removal procedure.
 - Install new O-ring seals and filter.

VARIABLE ASSIST STEERING ACTUATOR

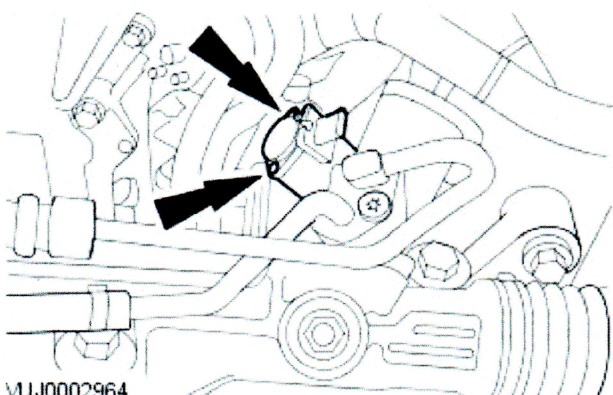

2.  **CAUTION:** Make sure both the retaining bolts are tightened an even number of turns.

Tighten to 3 Nm.

3. Install the air deflector.
For additional information, refer to Section [501-02 Front End Body Panels](#).
4. Bleed the power steering system.
For additional information, refer to Section [211-00 Steering System -](#)