

Engine Bay. Left-hand Side.

Relays

Unless otherwise stated, all relays have black cases and bases.

Position Function

- 1 Starter solenoid. Fitted to all AJ16 and V12 engine model variants.
- 2 Air conditioning coolant pump. Fitted to all AJ16 and V12 engine model variants.
- 3 Wiper motor FAST/SLOW. Fitted to all AJ16 and V12 engine model variants.
- 4 Wiper motor ON/OFF. Fitted to all AJ16 and V12 engine model variants.
- 5 Horn. Fitted to all AJ16 and V12 engine model variants. Blue case and black base.

Left Fusebox. Fuse No 1 is next to the input stud

No.	Rating	Circuit
F1	25A	RH Heated front screen - right-hand (where fitted)
F2	10A	Main beam headlamp - left-hand side
F3	25A	Starter solenoid
F4	10A	Dipped beam headlamp - left-hand side
F5	10A	Side marker light - front left-hand side Direction indicator - front left-hand side Side repeater flasher - left-hand side
F6	20A	Windscreen wiper system
F7	-	not used
F8	15A	Coolant pump (Air conditioning)
F9	-	not used
F10	10A	Horn 1
F11	30A	Cooling fans -series/parallel
F12	-	not used
F13	-	not used
F14	10A	Horn 2
F15	25A	Heated front screen left-hand side (where fitted)
F16	-	not used
F17	30A	Cooling fans (series)
F18	10A	Front fog lamp -left-hand side (where fitted)


Engine Bay. Right-hand Side

Relays

Unless otherwise stated, all relays have black cases and bases.

Position Function

- 1 Air conditioning clutch relay. Fitted to all AJ16 and V12 engine model variants. In non air conditioned vehicles the relay is replaced by a dummy relay (black case/ white stripe).
- 2 Secondary air injection control. Fitted to AJ16 and V12 engine model variants. In non air injection vehicles the relay is replaced by a dummy relay (black case/white stripe).
- 3 Engine management system control (AJ16). PI Main (V12).
- 4 Ignition coil (V12).
- 5 Screen wash. Fitted to all AJ16 and V12 engine model variants.
- 6 Power wash. Fitted to all AJ16 and V12 engine model variants. In non-power wash vehicles the relay is replaced by a dummy relay (black case/white stripe).
- 7 Ignition. Fitted to all AJ16 and V12 engine model variants. Blue case/black base.

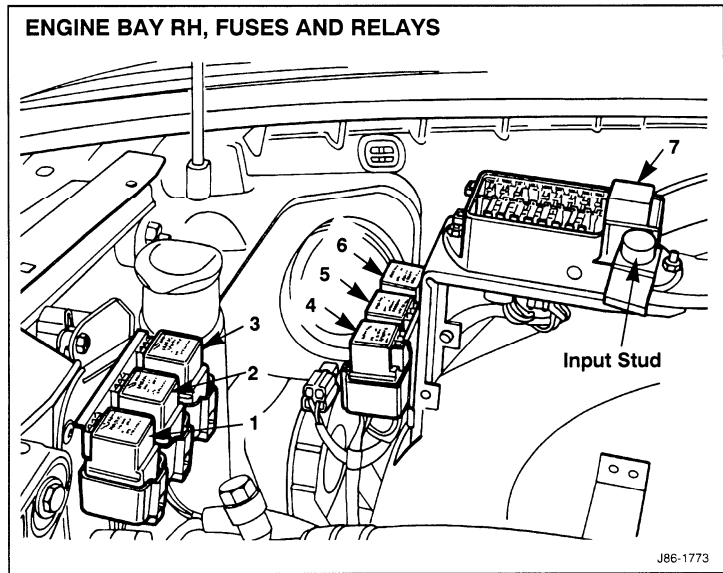

Right Fusebox. Fuse No 1 is next to input stud

No.	Rating	Circuit
F1	-	not used
F2	10A	Main beam headlamp - right-hand side
F3	-	not used
F4	10A	Dipped beam headlamp - right-hand side
F5	10A	Side marker light - front right-hand side, Direction indicator front right-hand side, Side repeater flasher - right-hand side
F6	5A	Engine Management System ECM
F7	25A	Air pump (3.2 and 4.0 litre) (where fitted), Ignition coils (6.0 litre V12)
F8	10A	Air conditioning clutch, Breather heater
F9	-	not used
F10	5A	Generator, Front lighting control module - right-hand, Air conditioning clutch, Windscreen wash/ headlamp power wash heaters and relays, Breather heater relay (3.2 & 4.0 litre)
F11	20A	Engine Management System, Starter relay, Ignition coil sensing and air pump relay (3.2 and 4.0 litre) Petrol injection relay, Engine management sensing (6.0 litre V12)
F12	10A	Engine Management System, Starter relay, Ignition coil sensing and air pump relay (3.2 and 4.0 litre) Petrol injection relay, Engine management sensing (6.0 litre V12)
F13	10A	Windscreen washer pump
F14	10A	HO2S heaters, Idle speed control valve
F15	-	not used
F16	10A	Air pump control, Solenoid vacuum valve (6.0 Litre V12), Coolant pump (4.0 litre Supercharged)
F17	30A	Headlamp power wash pump
F18	10A	Front fog lamp - right-hand side (where fitted)