


FOR 5A6

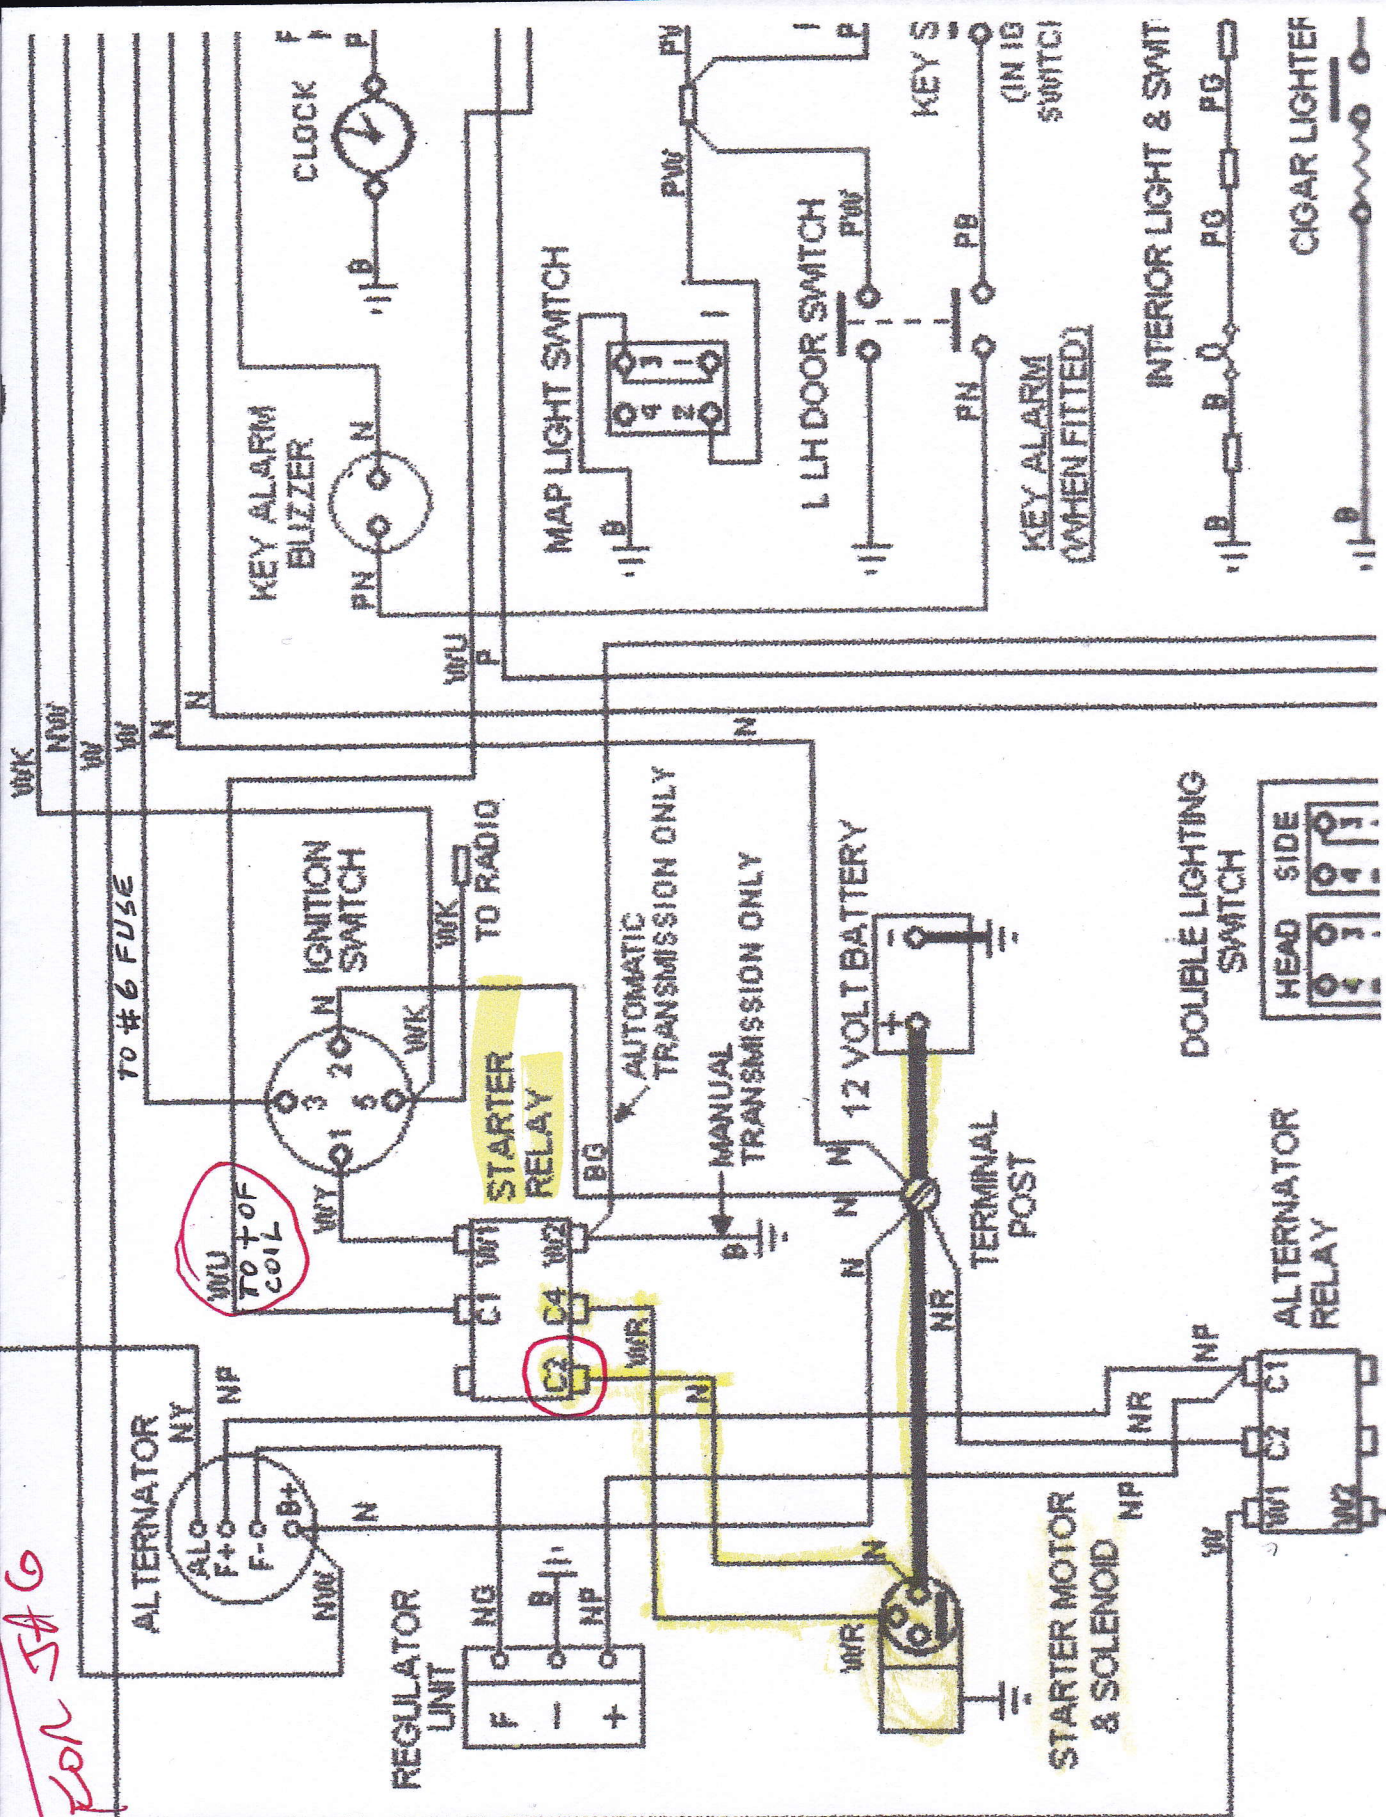

TO #6 FUSE

WU TO + OF COIL

STARTER RELAY

 
IGNITION SWITCH

12 VOLT BATTERY

TERMINAL POST

STARTER MOTOR & SOLENOID

DOUBLE LIGHTING SWITCH



ALTERNATOR RELAY

KEY ALARM BUZZER

CLOCK

MAP LIGHT SWITCH

L LH DOOR SWITCH

KEY S (IN IB SWITCH)

KEY ALARM (WHEN FITTED)

INTERIOR LIGHT & SWITCH

CIGAR LIGHTER