

**TEST RESULTS - LEFT AND RIGHT REAR WINDOW SWITCHES**

Test light (YES OR NO) and voltage meter

**1. IGNITION ON, INACTIVE SWITCH**

**LEFT SWITCH** 1-NO 2--NO 3-NO 4-NO 5-NO 6-YES/11.9V

**2. IGNITION ON SWITCH UP POSITION**

**LEFT SWITCH UP** 1-YES/11.97V 2-NO 3-YES/11.97V 4-YES/11.97V 5-NO 6-YES/11.97V

**RIGHT SWITCH UP** 1-NO 2-NO 3-YES/10.28V 4-NO 5-NO 6-YES/10.8V

**3. IGNITION ON SWITCH DOWN POSITION**

**LEFT SWITCH DOWN** 1-YES/11.97V 2-NO 3-YES/11.98V 4-YES/11.98V 5-NO 6-YES/11.9V

**NOTE: IF I "JUMP" TERMINALS 4 & 5, POWER TO MOTOR AND WINDOW GOES DOWN**

**IF I "JUMP" TERMINALS 2 & 3 NO POWER TO MOTOR, WINDOW DOES NOT GO UP**

**RIGHT SWITCH DOWN** 1-YES 10.28V 2-NO 3-YES/10.28V 4-NO 5-NO 6-NO

**WIRE COLORS: LEFT 1-G 2-R/W 3-R/O 4-G/O 5-G/BK 6-R**

**RIGHT 1-O 2-R/BK 3-O/W 4-G/Y 5-G/W 6-O**

SWITCH  
TERMINALS

