



| COMPONENT | No. | COMPONENT | No. | COMPONENT | No. | COMPONENT | No. | COMPONENT | No. |
|--|-----|---|-----|---|-----|--|-----|---|-----|
| Alternator | 1 | Battery cooling fan thermostat | 207 | Extra air valve | 317 | Headlamp pilot lamp (see sidelamp) | 11 | Overdrive solenoid | 71 |
| Aerial motor | 185 | Blocking diode - brake warning | 258 | Fibre optic illumination lamp | 256 | Headlamp relay | 255 | Oxygen (lambda) sensor | 316 |
| Aerial motor relay | 186 | Blocking diode - direction indicators | 289 | Flasher unit (part of 154) | 28 | Headlamp washer pump | 267 | Oxygen (lambda) sensor warning lamp (see Service Interval Counter*) | 316 |
| Air conditioning ambient sensor | 285 | Blocking diode - inhibit incorrect - polarity | 281 | Flasher lamp RH front | 315 | Headlamp washer/wiper switch (Scandi-navia only) | 265 | Panel lamps | 266 |
| Air conditioning amplifier | 281 | Brake light | 33 | Flasher lamp LH front | 315 | Horn | 24 | Radiator cooling fan diode | 174 |
| Air conditioning blower | 33 | Brake light switch | 188 | Flasher lamp RH rear | 30 | Horn push | 31 | Radiator cooling fan motor | 179 |
| Air conditioning blower relay | 188 | Brake differential pressure switch | 160 | Flasher lamp LH rear | 30 | Horn relay | 61 | Radiator cooling fan relay | 177 |
| Air conditioning compressor clutch | 190 | Brake failure warning light | 182 | Fog lamp LH | 160 | Ignition coil | 183 | Radiator cooling fan thermostat | 13 |
| Air conditioning control switch | 192 | Brake fluid level warning light | 192 | Fog lamp RH | 160 | Ignition coil amplifier | 30 | Radiator cooling fan thermostat | 13 |
| Air conditioning/ heater (too) | 138 | Brake fluid level warning light | 192 | Fuel out off relay | 295 | Ignition protection relay | 204 | Radiator cooling fan thermostat | 13 |
| Air conditioning in-car sensor | 284 | Choke control illumination | 214 | Fuel out off relay | 295 | Inertia switch | 34 | Rear fog guard lamp | 288 |
| Air conditioning servo | 282 | Choke warning light | 213 | Fuel gauge | 214 | Ignition warning lamp | 44 | Rear fog guard switch | 286 |
| Air conditioning temperature selector | 327 | Choke warning light | 213 | Fuel gauge tank unit | 213 | Injectors | 296 | Rear fog guard warning lamp | 290 |
| Air conditioning thermostat | 191 | Cigar lighter | 308 | Fuel injection control unit (E.C.U.) | 312 | Injector power resistors | 318 | Rear window demist switch | 115 |
| Air conditioning vacuum valve | 263 | Cigar lighter illumination | 191 | Fuel injection main relay | 312 | Interior light | 41 | Rear window demist unit | 116 |
| Air conditioning vacuum valve | 263 | Cold start injectors | 300 | Fuel injection - pressure sensor | 318 | Inverter | 20 | Rear window demist warning lamp | 150 |
| Air flow meter | 311 | Cold start relay (part of 312) | 299 | Fuel pump | 41 | Interior light switch | 324 | Reverse lamps | 50 |
| Air temperature sensor (part of 311) | 297 | Coolant temperature sensor | 305 | Fuel pump solenoid | 314 | Inverter | 20 | Reverse lamp switch | 48 |
| Alarms switch | 325 | Direction indicator switch | 305 | Fuel tank change-over switch | 26 | Line fuse | 19 | Revolutions counter | 245 |
| Anti-run on valve | 195 | Direction indicator warning light | 27 | Fuse box | 160 | Main beam warning light | 102 | Seat belt sequential start unit (Early cars) | 245 |
| Anti-run on valve oil pressure switch | 197 | Distributor | 40 | Handbrake switch | 165 | Main light switch | 6 | Seat belt sequential start unit (Later cars) | 245 |
| Auto gearbox kickdown solenoid | 181 | Door lock solenoid | 257 | Handbrake warning lamp | 166 | Map light | 152 | Seat belt warning control unit (Later cars) | 290 |
| Auto gearbox kickdown pressure switch | 180 | Door lock solenoid relay | 260 | Hazard warning flasher unit (includes 26) | 154 | Map light switch | 102 | Seat belt warning control unit (Early cars) | 245 |
| Auto gearbox selector lamp | 76 | Door lock switch | 21 | Hazard warning lamp | 258 | Map light switch | 102 | Seat belt warning control unit (Later cars) | 290 |
| Auto gearbox start inhibit switch | 75 | Door switch LH | 22 | Hazard warning lamp | 258 | Map light switch | 102 | Seat belt warning control unit (Later cars) | 290 |
| Ballast resistor | 164 | Door switch LH | 22 | Headlamp dip switch | 21 | Map light switch | 102 | Seat belt warning control unit (Later cars) | 290 |
| Base drive resistor (part of 164) (Later cars) | 278 | Door switch Buzzer alarm | 278 | Headlamp dip beam | 209 | Oil pressure switch (for 43 or 296) | 42 | Seat belt warning control unit (Later cars) | 290 |
| Battery | 3 | EGR warning lamp | 277 | Headlamp inner LH | 113 | Oil pressure transmitter (for 45) | 147 | Seat belt warning control unit (Later cars) | 290 |
| Battery condition indicator | 148 | EGR warning lamp - Interval Counter | 278 | Headlamp outer LH | 114 | Oil pressure warning lamp | 42 | Seat belt warning control unit (Later cars) | 290 |
| Battery cooling fan | 208 | EGR diode | 284 | Headlamp outer LH | 114 | Oil pressure warning lamp | 42 | Seat belt warning control unit (Later cars) | 290 |
| | | | | | | Overdrive control switch | 72 | Side lamp LH or (Headlamp pilot lamp) | 11 |
| | | | | | | Overdrive gear switch | 73 | Side lamp RH or (Headlamp pilot lamp) | 12 |
| | | | | | | | | Service Interval Counter Switch | 277 |
| | | | | | | | | Service Interval Counter warning light | 278 |
| | | | | | | | | Starter motor | 5 |
| | | | | | | | | Starter solenoid | 194 |
| | | | | | | | | Stop lamp | 18 |
| | | | | | | | | Stop lamp switch | 18 |
| | | | | | | | | Tail lamp LH | 17 |
| | | | | | | | | Tail lamp RH | 17 |
| | | | | | | | | Tail lamp switch | 22 |
| | | | | | | | | Thermal circuit breaker | 259 |
| | | | | | | | | Thermotime switch | 286 |
| | | | | | | | | Throttle switch | 310 |
| | | | | | | | | Trailer socket | 79 |
| | | | | | | | | * Unilateral parking light switch (Early cars) | 264 |
| | | | | | | | | Voltage stabiliser | 84 |
| | | | | | | | | Water temperature gauge | 46 |
| | | | | | | | | Water temperature transmitter for gauge | 47 |
| | | | | | | | | Window lift motor | 215 |
| | | | | | | | | Window lift motor | 220 |
| | | | | | | | | Window lift safety relay | 221 |
| | | | | | | | | Window lift switch RH front | 218 |
| | | | | | | | | Window lift switch LH front | 217 |
| | | | | | | | | Window lift switch RH rear | 219 |
| | | | | | | | | Window lift switch LH rear | 217 |
| | | | | | | | | Windscreen washer pump | 77 |
| | | | | | | | | Windscreen washer pump | 77 |
| | | | | | | | | Windscreen wiper motor | 251 |
| | | | | | | | | Windscreen wiper relay | 36 |
| | | | | | | | | * SIC operates EGR/Catalyst or F1 oxygen sensor warning light | |
| | | | | | | | | * See 86-41 | |