

COMPONENTS

DESCRIPTION	LOCATION	ACCESS
ANTI-SLOSH UNIT	LEFT REAR COMPONENT PANEL	LEFT TRUNK WHEEL ARCH
BULB CHECK UNIT	LEFT COMPONENT PANEL	LEFT DASH UNDER PANEL
COOLANT LEVEL TRANSMITTER	RIGHT COMPONENT PANEL	RIGHT DASH UNDER PANEL
COOLANT LEVEL SENSOR	BELOW B BANK AIR CLEANER, ON COOL. RESERVOIR	ENGINE COMPARTMENT
COOLANT TEMPERATURE TRANSMITTER	RIGHT FRONT WATER MANIFOLD	ENGINE COMPARTMENT
DIODE — (LBD64)	BEHIND INSTRUMENT PACK	INSTRUMENT PACK
DIODE — (RHDJA)	CENTER CONSOLE, LEFT, UNDER INSULATION	CENTER CONSOLE
FUEL LEVEL TRANSMITTER	FUEL TANK	TRUNK
INSTRUMENT PACK	DRIVER'S SIDE DASH	LEFT DASH UNDER PANEL
OIL PRESSURE SWITCH	BETWEEN A&B BANK, REAR OF ENGINE	ENGINE COMPARTMENT
OIL PRESSURE TRANSMITTER	BETWEEN A&B BANK, REAR OF ENGINE	ENGINE COMPARTMENT
PARKING BRAKE SWITCH	PARKING BRAKE	REMOVE BRAKE TRIM
WASHER RESERVOIR LEVEL SENSOR	BELOW UPPER RADIATOR HOSE	ENGINE COMPARTMENT

NOTE: COMPONENT IDENTIFICATIONS WITH [A] OR [B] RATHER THAN A NUMBER INDICATE COMPONENTS WITHOUT JDS DATA BASE IDENTIFICATION. THESE IDENTIFICATIONS ARE PENDING.

CONNECTORS

CODE	DESCRIPTION	LOCATION / INTERFACE
EH2	SPADE W/WHITE BOOT	BANK A, FRONT OF WATER MANIFOLD / COOLANT TEMP. TRANSMITTER
EM31	SPADE W/BOOT	BETWEEN A&B BANK, REAR OF ENGINE / OIL PRESSURE TRANSMITTER
EM32	SPADE	OIL PRESSURE SWITCH / ENGINE MANAGEMENT HARNESS
LB127	5-WAY AMP (WHITE)	BEHIND RIGHT COMPONENT PANEL / COOLANT LEVEL TRANSMITTER
LB174	RELAY BASE (GREEN)	LEFT COMPONENT PANEL / BULB CHECK UNIT
LD246	10-WAY HEWLETT PACKARD (BLACK)	BEHIND INSTRUMENT PACK / INSTRUMENT PACK
LB247	14-WAY HEWLETT PACKARD (BLACK)	BEHIND INSTRUMENT PACK / INSTRUMENT PACK
LF1	18-WAY SUMITOMO BLOCK (BLACK)	LEFT 'A' POST / COOLANT LEVEL SENSOR HARNESS
LF12	SPADE	COOLANT RESERVOIR / COOLANT LEVEL SENSOR
LF20	3-WAY PM 5 (BLACK)	BELOW UPPER RADIATOR HOSE / WASHER RESERVOIR LEVEL SENSOR
RF1	18-WAY SUMITOMO BLOCK (BLACK)	RIGHT 'A' POST / RF HARNESS
RF5	9-WAY PM 4 (BLACK)	REAR OF BANK A CYLINDER HEAD / RIGHT 'A' POST BULKHEAD HARNESS
RH101	SPADE	FUEL TANK / FUEL LEVEL TRANSMITTER
RH103	SPADE	FUEL TANK / FUEL LEVEL TRANSMITTER
RH133	SPADE	UNDER PARK BRAKE TRIM / PARK BRAKE SWITCH
RH134	SPADE	UNDER PARK BRAKE TRIM / PARK BRAKE SWITCH
RH135	SPADE	UNDER PARK BRAKE TRIM / PARK BRAKE SWITCH
RH161	20-WAY SUMITOMO BLOCK (NATURAL)	BELOW LEFT A/C OUTLET / REAR HARNESS
RH169	RELAY BASE (BLACK)	LEFT TRUNK BEHIND GAS STRUT SUPPORT / ANTI-SLOSH UNIT

GROUND

CODE	DESCRIPTION	LOCATION / INTERFACE
LBG201	EYELET	LEFT 'A' POST FASCIA END PANEL / POWER GROUND
LBG261	EYELET	RIGHT 'A' POST FASCIA END PANEL / POWER GROUND
LBG269	EYELET	LEFT 'A' POST FASCIA END PANEL / POWER GROUND
LCF19	EYELET	TOP RIGHT RADIATOR SUPPORT MOUNT / POWER GROUND
RHG105	EYELET	BETWEEN BATTERY AND INNER WHEEL ARCH / POWER GROUND
RHG106	EYELET	BETWEEN BATTERY AND INNER WHEEL ARCH / POWER GROUND
RHG136	EYELET	BASE OF HAND BRAKE / POWER GROUND

INPUTS / OUTPUTS

ANTI-SLOSH UNIT		NOTE: PERFORM TEST WITH ANTI-SLOSH UNIT DISCONNECTED / PROBE RELAY BASE		
CODE	IN / OUT	CIRCUIT	ACTIVE	INACTIVE
RH169-1	OUT	FUEL QUANTITY — DASH	KEY ON: 12V	KEY OFF: 0V
RH169-2	OUT	FUEL LEVEL — DASH	KEY ON: 12V	KEY OFF: 0V
RH169-3	IN	IGNITION SWITCHED POWER	KEY ON: 12V	KEY OFF: 0V
RH169-4	IN	FUEL LEVEL TRANSMITTER	RESISTANCE VARIES W/FUEL LEVEL; MAX: APPROX. 18Ω, MIN: APPROX. 250Ω	
RH169-5	IN	POWER GROUND	GROUND	GROUND



