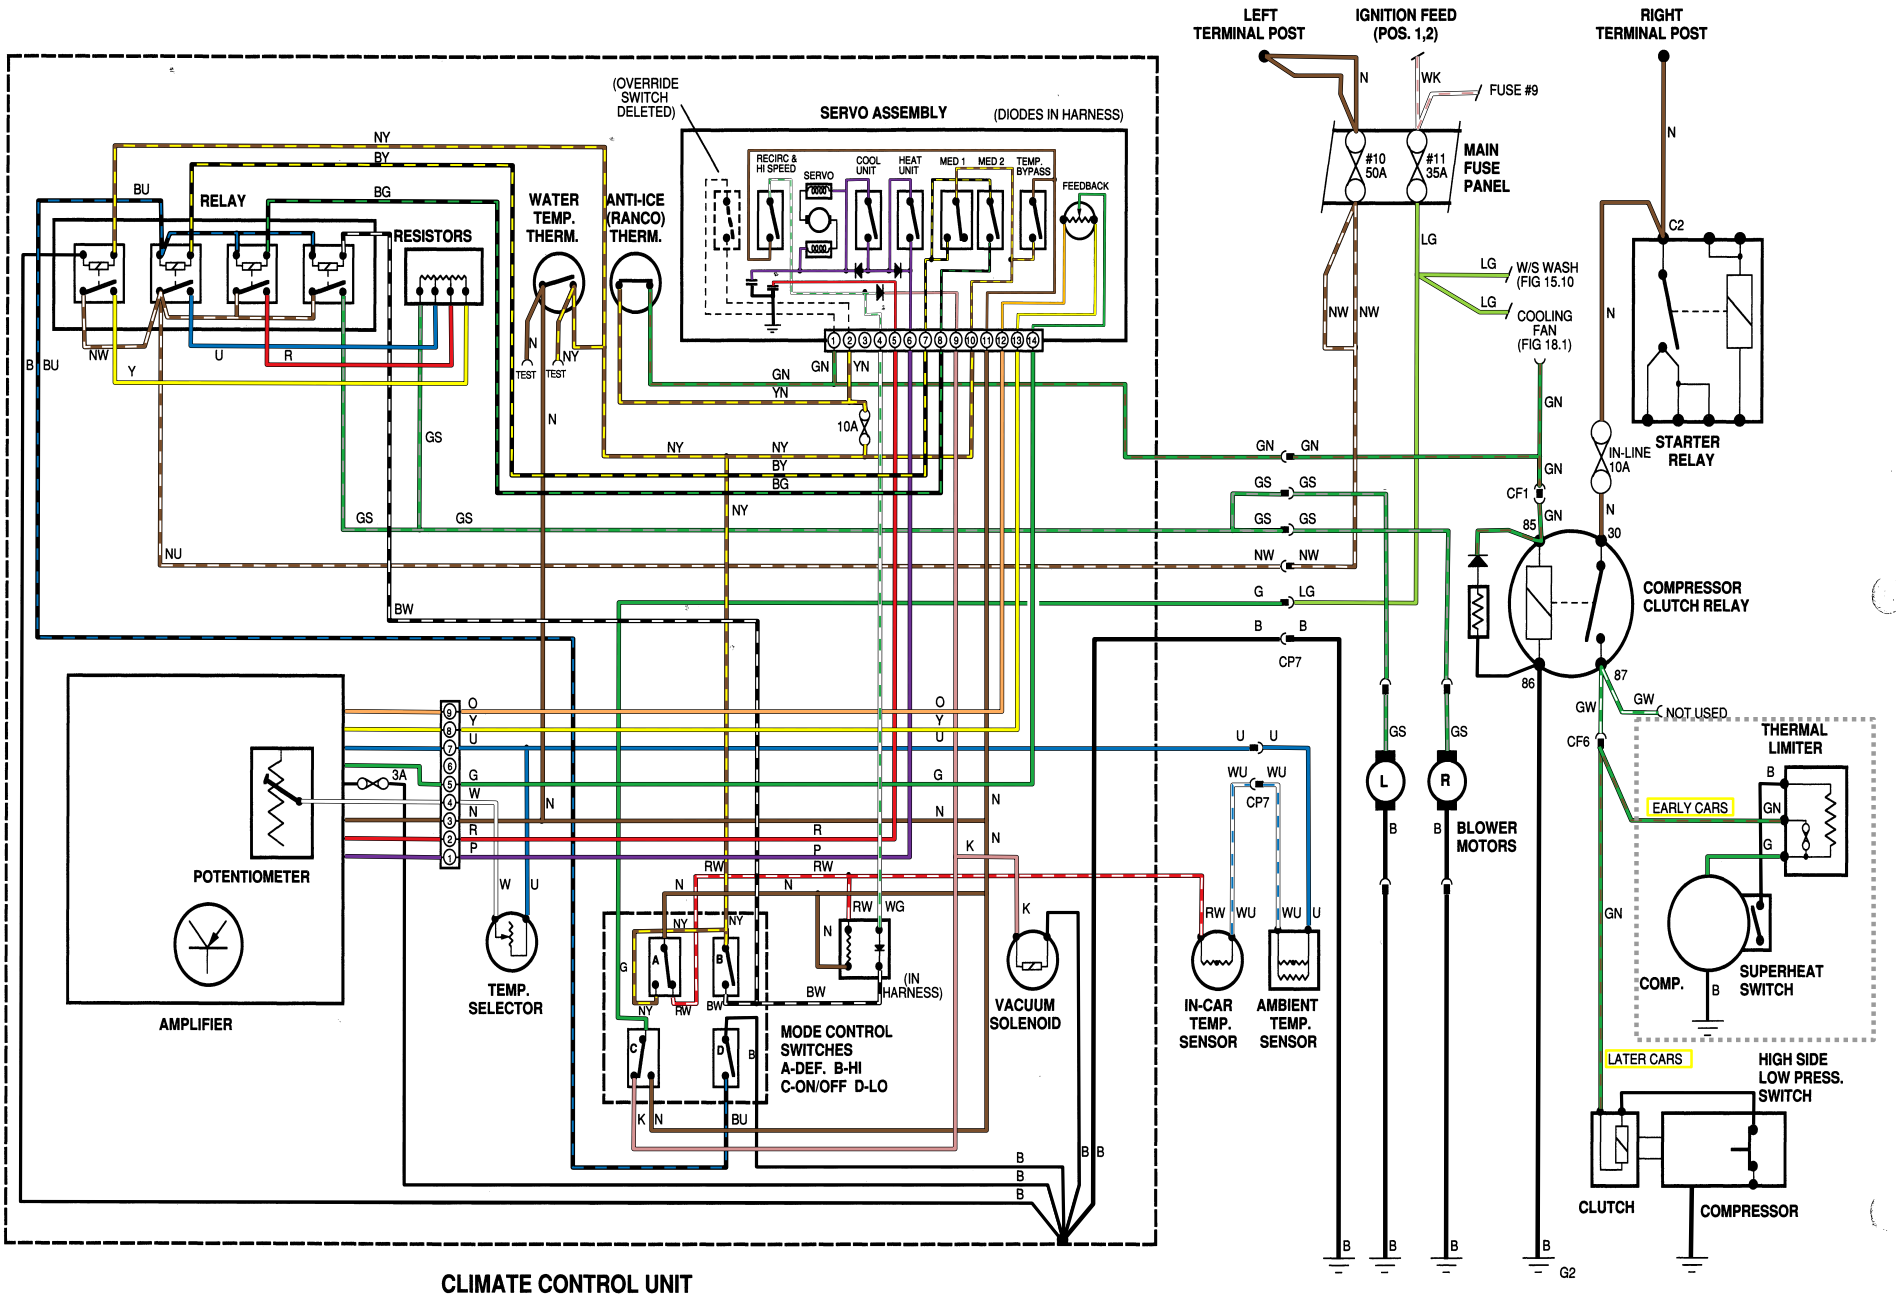
LEFT TERMINAL POST
IGNITION FEED (POS. 1,2)
RIGHT TERMINAL POST
FUSE #9
MAIN FUSE PANEL
#10 50A
#11 35A
W/S WASH (FIG 15.10
COOLING FAN (FIG 18.1)
STARTER RELAY
IN-LINE 10A
COMPRESSOR CLUTCH RELAY
NOT USED
THERMAL LIMITER
EARLY CARS
SUPERHEAT SWITCH
COMP.
LATER CARS
HIGH SIDE LOW PRESS. SWITCH
CLUTCH
COMPRESSOR
BLOWER MOTORS
(OVERRIDE SWITCH DELETED)
SERVO ASSEMBLY
(DIODES IN HARNESS)
RECIRC & HI SPEED
SERVO
COOL UNIT
HEAT UNIT
MED 1
MED 2
TEMP. BYPASS
FEEDBACK
RELAY
RESISTORS
WATER TEMP. THERM.
ANTI-ICE (RANCO) THERM.
TEST
POTENTIOMETER
AMPLIFIER
TEMP. SELECTOR
MODE CONTROL SWITCHES
A-DEF. B-HI
C-ON/OFF D-LO
(IN HARNESS)
VACUUM SOLENOID
IN-CAR TEMP. SENSOR
AMBIENT TEMP. SENSOR
CP7
CF1
CF6
G2
CLIMATE CONTROL UNIT