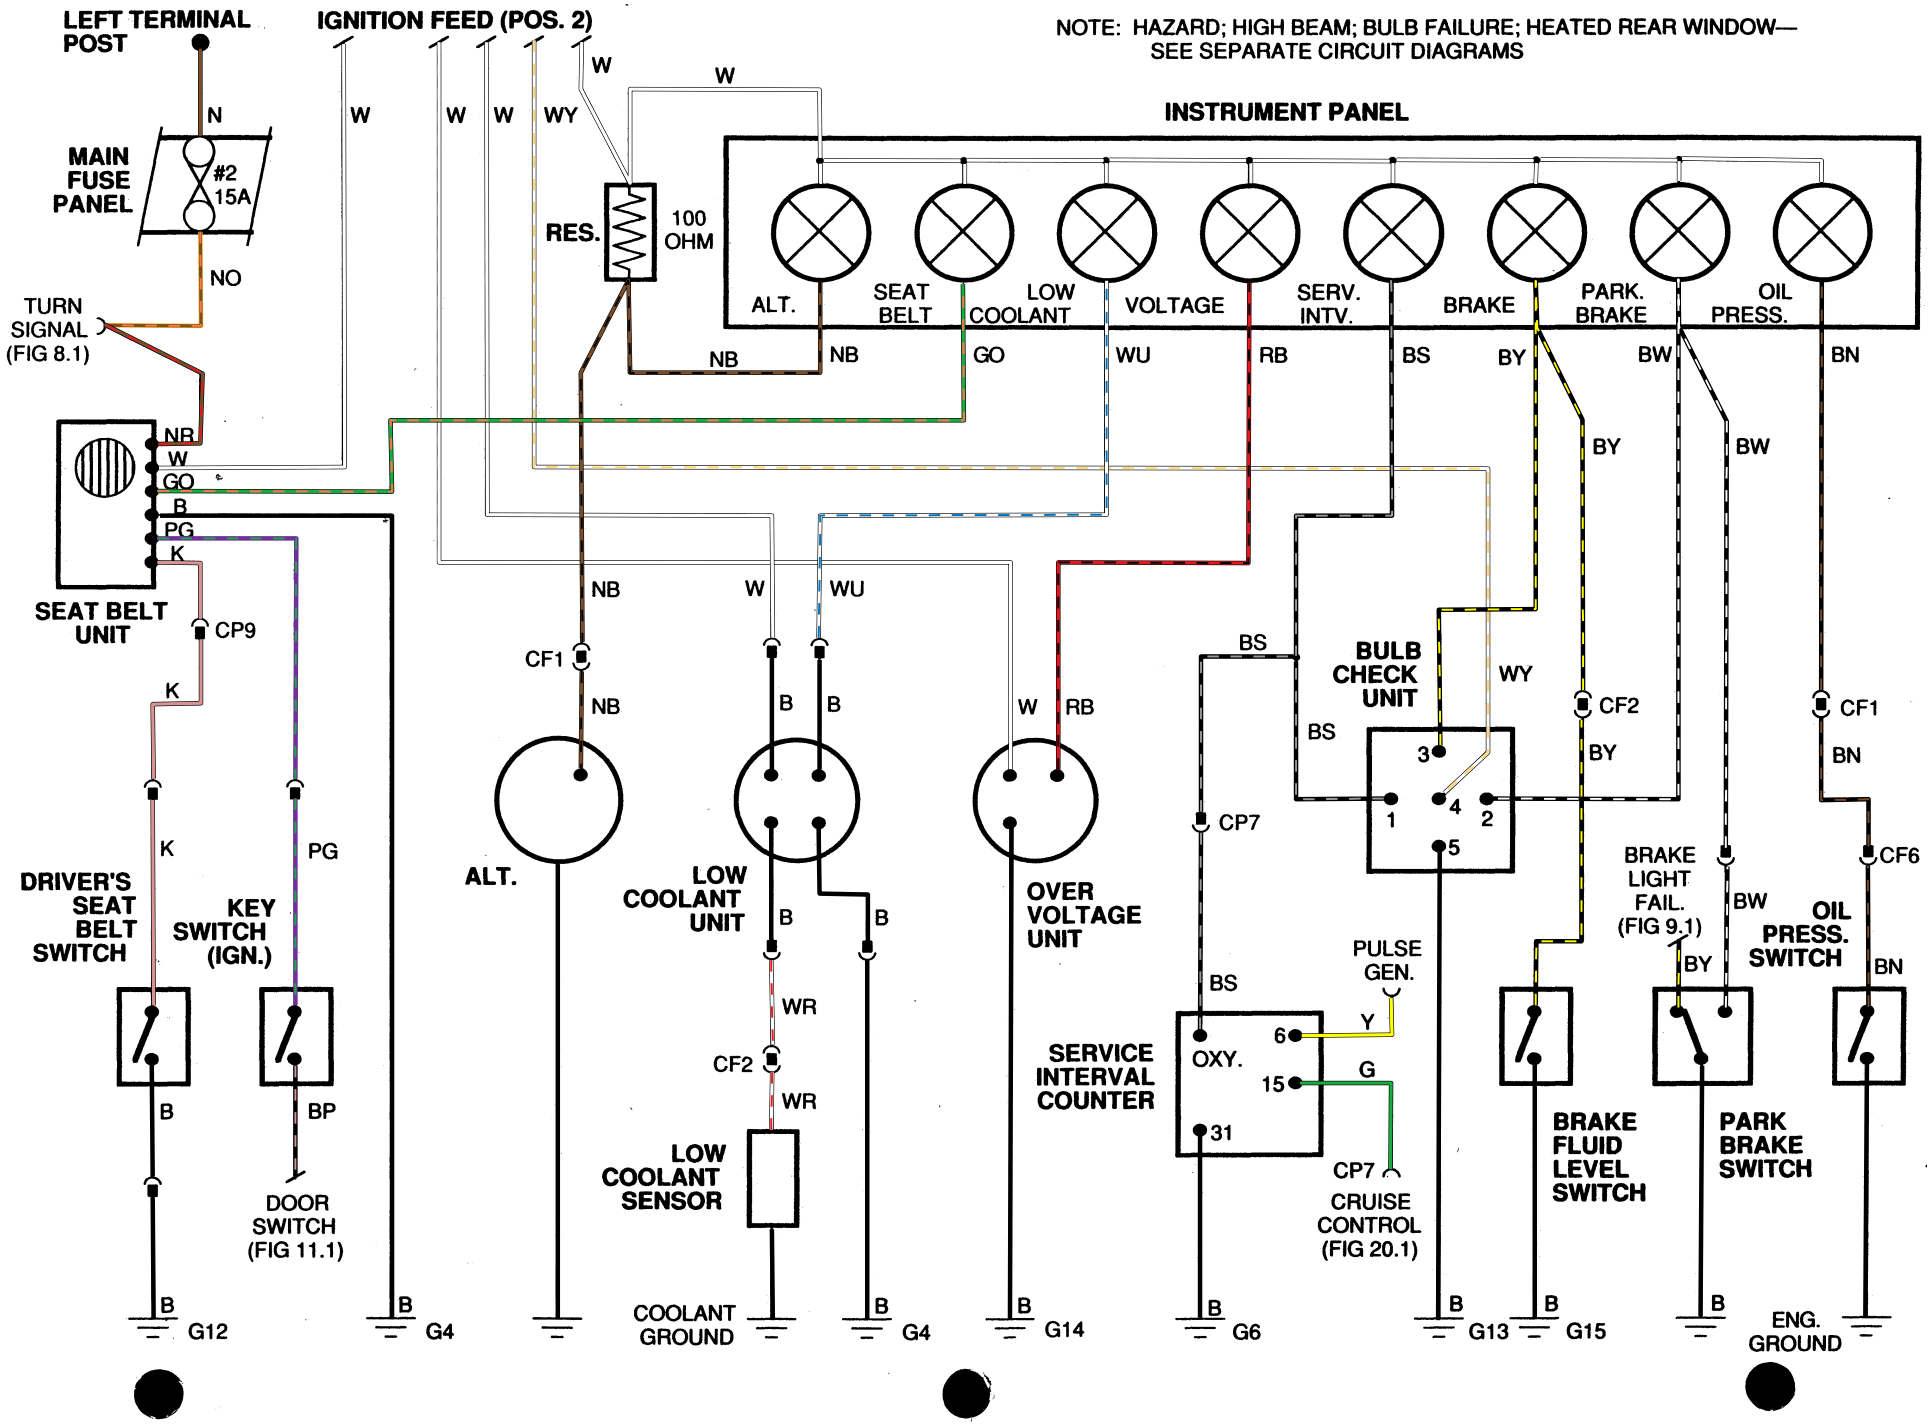
LEFT TERMINAL POST
IGNITION FEED (POS. 2)
NOTE: HAZARD; HIGH BEAM; BULB FAILURE; HEATED REAR WINDOW— SEE SEPARATE CIRCUIT DIAGRAMS
INSTRUMENT PANEL
MAIN FUSE PANEL
#2 15A
RES.
100 OHM
TURN SIGNAL (FIG 8.1)
ALT.
SEAT BELT
LOW COOLANT
VOLTAGE
SERV. INTV.
BRAKE
PARK. BRAKE
OIL PRESS.
SEAT BELT UNIT
CP9
DRIVER'S SEAT BELT SWITCH
KEY SWITCH (IGN.)
DOOR SWITCH (FIG 11.1)
ALT.
LOW COOLANT UNIT
LOW COOLANT SENSOR
COOLANT GROUND
OVER VOLTAGE UNIT
BULB CHECK UNIT
SERVICE INTERVAL COUNTER
OXY.
PULSE GEN.
CRUISE CONTROL (FIG 20.1)
CP7
CF1
CF2
CF6
BRAKE LIGHT FAIL. (FIG 9.1)
BRAKE FLUID LEVEL SWITCH
PARK BRAKE SWITCH
OIL PRESS. SWITCH
ENG. GROUND
G12
G4
G4
G14
G6
G13
G15